		Use case				
	Switch type	Switching mode	Control function	Illuminated		Note
				Lighting	Orientation (= continuous illumination)	
	3116 Rocker indicator switch, 2-way switch 3826 00 Rocker indicator switch, 2-way switch without mounting claws 3186 Rocker indicator switch, 16 AX	Circuit breaking	LED lighting element Variant 2 or 5 (vertical)	Replacement of the LED lighting element variant 2 or 5 (vertical) with variant 1 or 4 (horizontal)	Replacement of the LED lighting element variant 2 or 5 (vertical) with variant 1 or 4 (horizontal)	
:D lighting element	2-way switch Included with delivery: - LED lighting element variant 2 (vertical)	2-way switching	2x LED lighting element Variant 2 or 5 (vertical)	Replacement of the LED lighting element variant 2 or 5 (vertical) with variant 1 or 4 (horizontal)	2x LED lighting element variant 2 or 5 (vertical) 2x reconnection of the consumer at the output	
Pre-assembled switches with LED lighting element	3112 Rocker indicator switch, circuit breaker, 2-pole 3822 00 Rocker indicator switch, circuit breaker, 2-pole without mounting claws Included with delivery:	Circuit breaking	LED lighting element variant 1 or 4 (horizontal)		LED lighting element variant 1 or 4 (horizontal) LED lighting element must be rotated by 180° LED lighting element must be rotated by 180°	
	- LED lighting element variant 1 (horizontal)					
	3115 00 Rocker indicator switch, series switch 3825 00 Rocker indicator switch, series switch, without mounting claws	Series switching	LED lighting element variant 3			
	Included with delivery: - LED lighting element variant 3					

		Use case				
	Switch type	Switching mode	Control function	Illuminated		Note
				Lighting	Orientation (= continuous illumination)	
switches without LED lighting element	3106 Rocker switch, 2-way switch 3816 00 Rocker switch, 2-way switch, without mounting claws	Circuit breaking		Option 1 LED lighting element variant 2 or 5 (vertical) Connection of the consumer at the output Note: The consumer at the output of the consumer at t		Retrofitting the LED lighting element (as an optional accessory)
		2-way switching		2x LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)
Pre-assembled switch		Intermediate switching		2x LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)
<u>a</u>	3102 Rocker switch, circuit breaker, 2-pole 3812 00 Rocker switch, circuit breaker, 2-pole, without mounting claws	Circuit breaking	LED lighting element variant 1 or 4 (horizontal)		LED lighting element variant 1 or 4 (horizontal) LED lighting element must be rotated by 180° LED lighting element must be rotated by 180°	Retrofitting the LED lighting element (as an optional accessory)
	3107 Rocker switch, intermediate switch 3817 00 Rocker switch, intermediate switch, without mounting claws	Intermediate switching		LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)

		Use case				
	Switch type	Switching mode	Control function	Illuminated		Note
				Lighting	Orientation (= continuous illumination)	
sembled pushbutton switches with LED lighting element	3136 00 Pushbutton indicator switch, 2-way switch Included with delivery: - LED lighting element variant 2		LED lighting element variant 2 or 5 (vertical)	LED lighting element variant 2 or 5 (vertical) Option 1 lighting from the control function Reconnection of the consumer at the output Note: The consumer at the output be rotated by 180° Reconnection of the consumer at the output Lacable 1 and 1 an	Replacement of the LED lighting element variant 2 or 5 (vertical) with variant 1 or 4 (horizontal)	
Pre-assembled pushbu		2-way switching	2x LED lighting element variant 2 or 5 (vertical)	Replacement of the LED lighting element variant 2 or 5 (vertical) with variant 1 or 4 (horizontal)	2x LED lighting element variant 2 or 5 (vertical) 2x reconnection of the consumer at the output	
	3135 00 Pushbutton indicator switch, series switch 3845 00 Pushbutton indicator switch, series witch, without mounting claws Included with delivery: - LED lighting element variant 3	Series switching	LED lighting element variant 3 (3 contacts)			

		Use case				
	Switch type	Switching mode	Control function	Illuminated		Note
				Lighting	Orientation (= continuous illumination)	
ED lighting element	3126 00 Pushbutton switch, 2-way switch 3836 00 Pushbutton switch, 2-way switch without mounting claws	Circuit breaking		Option 1 LED lighting element variant 2 or 5 (vertical) Reconnection of the consumer at the output Option 2 LED lighting element variant 1 or 4 (horizontal) Reconnection of the consumer at the output LACCEDIANCE OPTION 2 LED Lighting element variant 1 or 4 (horizontal) Reconnection of the consumer at the output		Retrofitting the LED lighting element (as an optional accessory)
Pre-assembled pushbutton switches without LED lighting element		2-way switching		2x LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)
		Intermediate switching		2x LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)
Pre	3122 00 Pushbutton indicator switch, circuit breaker, 2-pole 3842 00 Pushbutton indicator switch, circuit breaker, 2-pole, without mounting claws	Circuit breaking	LED lighting element variant 1 or 4 (horizontal)		LED lighting element variant 1 or 4 (horizontal) LED lighting element must be rotated by 180° LACEBOY- N	Retrofitting the LED lighting element (as an optional accessory)
	3127 00 Pushbutton switch, intermediate switch 3837 00 Pushbutton switch, intermediate switch, without mounting claws	Intermediate switching		LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)

		Use case				
	Switch type	Switching mode	Control function	Illuminated		Note
				Lighting	Orientation (= continuous illumination)	
Pre-assembled buttons without LED lighting element	3151 Rocker button, normally open contact 3871 00 Rocker button, normally open contact, without mounting claws	Staircase lighting		LED lighting element variant 2 or 5 (vertical)		Retrofitting the LED lighting element (as an optional accessory)
	3150 00 Rocker button, normally open contact, N terminal 3870 00 Rocker button, normally open contact, N terminal, without mounting claws	Staircase lighting			LED lighting element variant 1 or 4 (horizontal)	Retrofitting the LED lighting element (as an optional accessory)
	3152 00 Rocker button, normally open contact, signal contact 3872 00 Rocker button, normally open contact, signal contact, without mounting claws		LED lighting element variant 2 or 5 (vertical)	LED lighting element variant 2 or 5 (vertical) LED lighting element must be rotated by 180°	LED lighting element variant 1 or 4 (horizontal)	Retrofitting the LED lighting element (as an optional accessory)
	3156 00 Rocker button, 2-way momentary contact 3876 00 Rocker button, 2-way momentary contact, without mounting claws	Staircase lighting		Option 1 LED lighting element variant 1 or 4 (horizontal)		Retrofitting the LED lighting element (as an optional accessory)
				Option 2 LED lighting element variant 2 or 5 (vertical)		