

Stand der Dokumentation:  
31.07.2014

# KNX IP-Schnittstelle

## Best.-Nr. 2168 00



## Inhaltsverzeichnis

<b>1</b>	<b><u>Produktdefinition</u></b> .....	<b>4</b>
1.1	Produktkatalog .....	4
1.2	Zubehör.....	4
1.3	Anwendungszweck.....	4
<b>2</b>	<b><u>Montage, elektrischer Anschluss und Bedienung</u></b> .....	<b>5</b>
2.1	Sicherheitshinweise.....	5
2.2	Geräteaufbau .....	6
2.3	Montage und elektrischer Anschluss.....	7
2.4	Inbetriebnahme .....	9
2.5	Bedienung.....	10
<b>3</b>	<b><u>Technische Daten</u></b> .....	<b>12</b>
<b>4</b>	<b><u>Software-Beschreibung</u></b> .....	<b>13</b>
4.1	Software-Spezifikation .....	13
4.2	Software "KNX/IP- Schnittstelle 901410" .....	14
4.2.1	Funktionsumfang .....	14
4.2.2	Hinweise zur Software .....	15
4.2.3	Objekttabelle.....	16
4.2.4	Funktionsbeschreibung .....	17
4.2.5	Auslieferungszustand.....	18
4.2.6	Parameter .....	19
<b>5</b>	<b><u>Anhang</u></b> .....	<b>20</b>
5.1	Betrieb in der ETS3.....	20
5.2	Betrieb in der ETS4.....	24

<b><u>6</u></b>	<b><u>Lizenz-Vertrag KNX/IP-Schnittstelle Software.....</u></b>	<b><u>28</u></b>
6.1	Definitionen .....	28
6.2	Vertragsgegenstand.....	28
6.3	Rechte zur Nutzung der KNX/IP-Schnittstellen Software.....	28
6.4	Beschränkung der Nutzungsrechte .....	29
6.5	Eigentum, Geheimhaltung.....	30
6.6	Änderungen, Nachlieferungen.....	30
6.7	Gewährleistung .....	30
6.8	Haftung .....	31
6.9	Anwendbares Recht.....	31
6.10	Beendigung .....	31
6.11	Nebenabreden und Vertragsänderungen.....	31
6.12	Ausnahme .....	31
<b><u>7</u></b>	<b><u>Open Source Software .....</u></b>	<b><u>32</u></b>
7.1	GNU GPL, Version 2, June 1991 .....	33
7.2	GNU LGPL, Version 2.1, February 1999.....	38

## 1 Produktdefinition

### 1.1 Produktkatalog

Produktname: KNX/IP-Schnittstelle  
Verwendung: IP-Schnittstelle  
Bauform: REG (Reiheneinbau)  
Best.-Nr.: 2168 00

### 1.2 Zubehör

Zusatz-Spannungsversorgung  
Bestell-Nr.: 1296 00  
KNX/EIB Spannungsversorgung 320 mA  
Bestell-Nr.: 1086 00

### 1.3 Anwendungszweck

Die KNX/IP-Schnittstelle verbindet eine Instabus KNX/EIB-Linie mit einem Datennetzwerk (Ethernet) unter Nutzung des Internet Protokolls (IP). Sie nutzt den KNXnet/IP Standard (Tunneling), sodass über ein IP Netzwerk der Buszugriff von einem PC oder anderen Datenverarbeitungsgeräten erfolgen kann.

Die KNX/IP-Schnittstelle kann mit der ETS 3.0 ab Version „f“ oder der ETS 4.0 oder höher eingesetzt werden.

Das Gerät unterstützt bis zu 4 KNXnet/IP Tunneling Verbindungen und ermöglicht damit parallelen Buszugriff z.B. durch die ETS und weitere PC Software.

Es verfügt über einen integrierten Switch mit zwei RJ45-Anschlüssen. Hiermit können mehrere KNX/IP-Schnittstellen oder auch andere IP-Geräte in der Verteilung ohne Zuhilfenahme anderer aktiver Komponenten verbunden werden.

Für den Betrieb benötigt die KNX/IP-Schnittstelle eine separate Spannungsversorgung 24..30V DC  $\pm 10\%$ . Die Versorgung der KNX/IP-Schnittstelle erfolgt über diesen Betriebsspannungsanschluss.

## **2 Montage, elektrischer Anschluss und Bedienung**

### **2.1 Sicherheitshinweise**

Einbau und Montage elektrischer Geräte dürfen nur durch eine Elektrofachkraft erfolgen. Dabei sind die geltenden Unfallverhütungsvorschriften zu beachten.

Bei Nichtbeachten der Installationshinweise können Schäden am Gerät, Brand oder andere Gefahren entstehen.

Weitere Informationen entnehmen Sie bitte der dem Gerät beigefügten Bedienungsanleitung.

### 2.2 Geräteaufbau

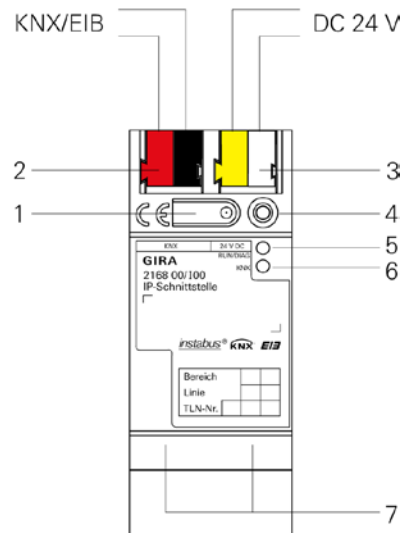


Abbildung 1: KNX/IP-Schnittstelle

#### Abmessungen:

Breite (B):  
36 mm (2 TE)

Höhe (H):  
90 mm

Tiefe (T):  
74 mm

1 Programmier-Taste

2 Anschluss KNX

3 Anschluss Externe Spannungsversorgung\* 24..30V DC  $\pm 10\%$ .

4 Programmier-LED (rot)  
an: Programmiermodus an  
aus: Programmiermodus aus

5 LED Betriebsanzeige (grün)  
an: Betriebsbereit  
blinkt: Diagnosecode

6 LED KNX (gelb)  
an: KNX ist verbunden  
aus: KNX ist nicht verbunden  
blinkt: Daten auf KNX-Linie

7 Anschluss Ethernet

- 10/100 Speed (grün)  
an: 100 Mbit/s  
aus: 10 Mbit/s
- Link/ACT (orange)  
an: Link zum IP Netz  
aus: keine Verbindung  
blinkt: Datenempfang auf IP

## 2.3 Montage und elektrischer Anschluss

---



### **GEFAHR!**

**Elektrischer Schlag bei Berühren spannungsführender Teile. Elektrischer Schlag kann zum Tod führen.**


**Vor Arbeiten am Gerät Anschlussleitungen freischalten und spannungsführende Teile in der Umgebung abdecken!**

---

### **Gerät montieren**

- Aufschnappen auf Hutschiene nach DIN EN 60715. Netzwerkanschluss muss unten liegen.

 Es ist keine KNX/EIB Datenschiene erforderlich.

 Temperaturbereich beachten (0 °C...+45 °C) und ggf. für ausreichende Kühlung sorgen.

### **Gerät anschließen**

- Verbinden des KNX/EIB-Busses mit dem KNX Anschluss der Schnittstelle (2) mit einer KNX/EIB Anschlussklemme.
- Verbinden der externen Spannungsversorgung\* mit dem Spannungsversorgungsanschluss (3) der Schnittstelle mit einer KNX/EIB Anschlussklemme (vorzugsweise gelb/weiß).
- Verbinden von einer oder zwei Netzwerkleitungen mit dem Netzwerkanschluss der Schnittstelle (7).


\*: Als externe Spannungsversorgung kann auch der ungedrosselte Ausgang eines KNX/EIB Netzteils genutzt werden. Es ist darauf zu achten, dass sich dann die Anzahl der KNX/EIB Geräte, welche mit dem KNX/EIB Netzteil maximal betrieben werden können, entsprechend verringert.

### Abdeckkappe anbringen / entfernen

Zum Schutz des Busanschlusses / Spannungsversorgungsanschlusses vor gefährlichen Spannungen insbesondere im Anschlussbereich kann zur sicheren Trennung eine Abdeckkappe aufgesteckt werden.

Das Montieren der Kappe erfolgt bei aufgesteckter Bus- und Spannungsversorgungsklemme und angeschlossener, nach hinten geführter Bus- und Spannungsversorgungsleitung.

- Abdeckkappe anbringen: Die Abdeckkappe wird über die Busklemme geschoben (vgl. Abbildung 2.A), bis sie spürbar einrastet.
- Abdeckkappe entfernen: Die Abdeckkappe wird entfernt, indem sie seitlich leicht eingedrückt und nach vorne abgezogen wird (vgl. Abbildung 2.B).

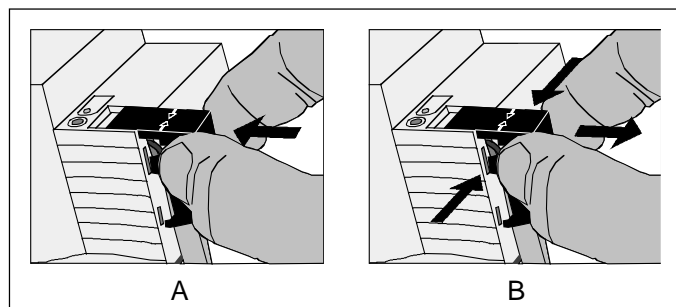

**Abbildung 2: Abdeckkappe anbringen / entfernen**



### 2.4 Inbetriebnahme

Nach der Montage des Gerätes und dem Anschluss von Buslinie, Spannungsversorgung und Ethernet kann das Gerät in Betrieb genommen werden.

Werkseitig voreingestellt sind folgende physikalische Adressen

Schnittstelle	15.15.255
---------------	-----------

Um das Gerät nutzen zu können, muss diese Adresse neu programmiert werden. Außerdem sollte das Applikationsprogramm eingespielt werden.

#### **Physikalische Adresse der Schnittstelle programmieren**

Die Programmierung erfolgt in der Programmierumgebung der ETS (3.0f, 4.0 oder höher). Für die Programmierung wird keine zusätzliche KNX/EIB Datenschnittstelle benötigt. Die Verbindung zum Gerät kann dafür über IP oder über KNX erfolgen.

- Sicherstellen, dass Gerät und Busspannung eingeschaltet sind
- Sicherstellen, dass die Programmier-LED (4) nicht leuchtet.
- Programmier Taste (1) drücken.  
Programmier-LED (4) leuchtet rot
- Physikalische Adresse mit Hilfe der ETS programmieren.  
Programmier-LED (4) erlischt nach einem erfolgreichen Programmiervorgang.
- Physikalische Adresse auf dem Gerät notieren
- Wurde das Gerät ohne eine zusätzliche KNX/EIB Datenschnittstelle programmiert, so muss die Tunnelingverbindung nach dem Programmiervorgang neu aufgebaut werden.

#### **Applikationsprogramme und Projektierungsdaten programmieren**

Nach der Programmierung der physikalischen Adresse muss das Applikationsprogramm für die Schnittstelle in das Gerät eingespielt werden. Die Verbindung zum Gerät kann dafür über IP oder über KNX erfolgen.

- Sicherstellen, dass Gerät und Busspannung eingeschaltet sind
- In der ETS das jeweilige Gerät entsprechend parametrieren
- Die Software in das Gerät einspielen
- Die Inbetriebnahme ist abgeschlossen
- Wurde das Gerät ohne eine zusätzliche KNX/EIB Datenschnittstelle programmiert, so muss die Tunnelingverbindung nach dem Programmiervorgang neu aufgebaut werden.

### 2.5 Bedienung

Die KNX/IP-Schnittstelle verfügt über 3 Status-LEDs auf der Gehäuseoberseite und über 4 Status-LEDs am Netzwerkanschluss. Außerdem ist eine Programmier-Taste vorhanden über die die Schnittstelle in den Programmiermodus versetzt werden kann.

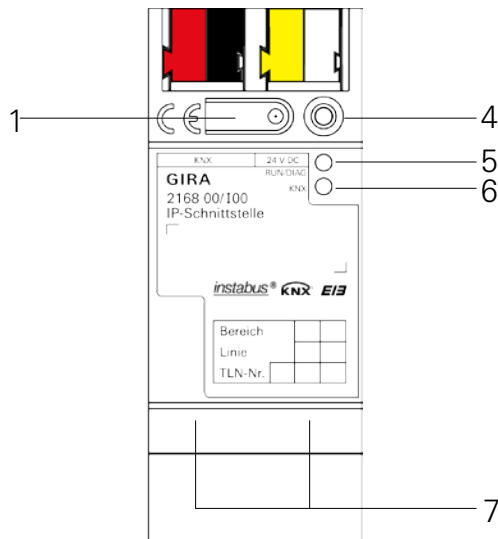


Abbildung 3: KNX/IP-Schnittstelle

1 Programmier-Taste

4 Programmier-LED (rot)

an: Programmiermodus an  
aus: Programmiermodus aus

5 LED Betriebsanzeige (grün)

an: Betriebsbereit  
blinkt: Diagnosecode

6 LED KNX (gelb)

an: KNX ist verbunden  
aus: KNX ist nicht verbunden  
blinkt: Daten auf KNX-Linie

7 Anschluss Ethernet

- 10/100 Speed (grün)  
an: 100 Mbit/s  
aus: 10 Mbit/s
- Link/ACT (orange)  
an: Link zum IP Netz  
aus: keine Verbindung  
blinkt: Datenempfang auf IP

### Diagnosecodes

Anhand der Betriebsanzeige (5) kann auf den aktuellen Gerätestatus geschlossen werden:

- LED aus: Gerät ist nicht eingeschaltet oder noch nicht vollständig hochgefahren.
- LED an: Gerät ist betriebsbereit.
- LED blinkt langsam (~1Hz): Gerät ist nicht konfiguriert oder wurde mit unzulässigen Parametern konfiguriert. Für die Schnittstelle muss die physikalische Adresse eingestellt und das Applikationsprogramm mit zulässigen Parametern in das Gerät eingespielt werden, damit die LED aufhört zu blinken. Siehe dazu „2.4 Inbetriebnahme“.
- LED blinkt schnell (~4Hz): Interner Gerätefehler. Bitte wenden Sie sich an den Support.

### LED Status beim Hochfahren des Gerätes

Wenn das Gerät ordnungsgemäß hochfährt, leuchtet die gelbe LED (6) nach Anlegen der Betriebsspannung und signalisiert damit den Startvorgang. Sobald das Gerät vollständig hochgefahren ist leuchtet die grüne LED (5) durchgehend, sofern das Gerät bereits parametrierung ist oder sie blinkt entsprechend den Diagnosecodes. Von diesem Zeitpunkt an signalisiert die gelbe LED (6) den KNX Busstatus und KNX Telegramme.

Beim Hochfahren des Gerätes wird ein Selbsttest durchgeführt. Sollte es hierbei zu einem Fehler kommen, so blinken die gelbe LED (6) und die grüne LED (5) abwechselnd unmittelbar nachdem die Betriebsspannung angelegt wurde. In diesem Fall wenden Sie sich bitte an den Support.

## 3 Technische Daten

KNX-Medium	TP
Inbetriebnahmemodus	S-Mode (ETS)
Versorgung KNX	DC 21...30V SELV
Anschluss KNX	Bus-Anschlussklemme
Externe Versorgung	
Spannung	DC 24..30V ±10%
Anschluss	Anschlussklemme
Leistungsaufnahme	typ. 2W (bei 24V DC, 2 Ethernetleitungen verbunden)
IP-Kommunikation	Ethernet 10 /100 BaseT (10/100 MBit)
Anschluss IP	2 x RJ45
Unterstützte Protokolle	ARP, ICMP, IGMPv3, UDP/IP, DHCP, AutoIP KNXnet/IP gemäß KNX System Spezifikation: Core, Tunneling, Device Management
Umgebungstemperatur	0 °C bis +45 °C
Lagertemperatur	-25 °C bis +70 °C
Einbaubreite	36 mm (2 TE)
Einbauhöhe	90 mm
Einbautiefe	74 mm
Schutzart	IP20 (nach EN60529)
Schutzklasse	III (nach IEC 61140)
Prüfzeichen	KNX, CE

## 4 Software-Beschreibung

### 4.1 Software-Spezifikation

ETS-Suchpfade: - Kommunikation / IP Schnittstelle / KNX/IP- Schnittstelle

Konfiguration: S-mode standard

Applikationen:

Nr.	Kurzbeschreibung	Name	Version
1	KNX/IP-Schnittstelle	KNX/IP- Schnittstelle 901410	1.0

## 4.2 Software "KNX/IP- Schnittstelle 901410"

### 4.2.1 Funktionsumfang

- Einfache Anbindung an übergeordnete Netzwerksysteme durch Nutzung des Internet Protokolls (IP)
- Direkten Zugriff von jedem Punkt im IP-Netzwerk auf die KNX/EIB Installation (KNXnet/IP Tunneling)
- Einfache Konfiguration mit der ETS 3/4
- Unterstützung von bis zu 4 parallelen KNXnet/IP Tunneling Verbindungen
- Unterstützung von einer Busmonitorverbindung
- Einfache Anbindung von Visualisierungssystemen und Facility Management Systemen

## 4.2.2 Hinweise zur Software

- Der KNX/IP-Schnittstelle ist ab ETS 3.0f parametrierbar.
- Bei Nutzung der ETS 3.0f muss der Falcon auf die Version 2.0 upgedatet werden. Das Update kann kostenlos von der Homepage der KNX (<http://www.knx.org>) bezogen werden.

## 4.2.3 Objekttabelle

Anzahl der Kommunikationsobjekte: 0



## 4.2.4 Funktionsbeschreibung

### IP Adresszuweisung

Die Zuweisung der IP-Adresse des Gerätes kann entweder manuell oder durch einen DHCP Server erfolgen. Dies kann über den Parameter „IP Adresszuweisung“ auf der Parameterseite „Allgemein“ konfiguriert werden.





Bei der Einstellung „manuelle Eingabe“ gelten für die Schnittstelle die auf den Parameterseiten „IP-Adresse“, „IP-Subnetzmaske“ und „IP-Standard Gateway“ eingestellten Werte. Im Auslieferungszustand bezieht die Schnittstelle ihre IP-Adresse von einem DHCP Server.

Bei der Einstellung „von DHCP Dienst“ muss ein DHCP Server der KNX/IP-Schnittstelle eine gültige IP-Adresse zuteilen. Steht bei dieser Einstellung kein DHCP-Server zur Verfügung, so fährt die Schnittstelle nach einer gewissen Wartezeit mit einer AutoIP-Adresse hoch (Adressbereich von 169.254.1.0 bis 169.254.254.255). Sobald ein DHCP Server zur Verfügung steht wird dem Gerät automatisch eine neue IP-Adresse zugewiesen.

## 4.2.5 Auslieferungszustand

physikalische Adresse	15.15.255
physikalische Adresse der Tunnelingverbindungen	15.15.255
Gerätename	Gira KNX/IP-Schnittstelle
IP Adresszuweisung	von DHCP Dienst
IP Adresse	DHCP
IP Subnetzmaske	DHCP
IP Standard Gateway	DHCP

## 4.2.6 Parameter

Beschreibung:	Werte:	Kommentar:
 Allgemein		
Gerätename (maximal 30 Zeichen)	max. 30 Zeichen, <b>Gira KNX/IP-Schnittstelle</b>	Über diesen Parameter erhält die KNX/IP-Schnittstelle einen eindeutigen Namen mit maximal 30 Zeichen, der zur einfachen Wiedererkennung des Gerätes bei der Suche mit einer KNXnet/IP Visualisierung oder mit der ETS dient.
IP Adresszuweisung	<b>Von DHCP Dienst</b>  manuelle Eingabe	Definiert ob die IP-Adresse des Gerätes manuell oder automatisch (per DHCP-Server) zugewiesen wird.
 IP-Adresse		
IP-Adresse		
Byte 1 (0...255)	0..255, <b>192</b>	Definiert die IP-Adresse der KNX/IP-Schnittstelle bei aktivierter manueller Adresszuweisung. Die Adresse wird aus 4 einzelnen Bytes zusammengesetzt. Voreingestellt ist 192.168.0.10. Werden ungültige Parameter konfiguriert (z.B. ein Gateway das nicht zu der eingestellten IP-Adresse oder den konfigurierten DNS Adressen passt), so wird das Gerät automatisch auf DHCP eingestellt und die grüne LED beginnt langsam zu blinken (~1Hz).
Byte 2 (0...255)	0..255, <b>168</b>	
Byte 3 (0...255)	0..255, <b>0</b>	
Byte 4 (0...255)	0..255, <b>10</b>	
 IP-Subnetzmaske		
IP-Subnetzmaske		
Byte 1 (0...255)	0..255, <b>255</b>	Definiert die IP-Subnetzmaske der KNX/IP-Schnittstelle bei aktivierter manueller Adresszuweisung. Die Maske wird aus 4 einzelnen Bytes zusammengesetzt. Voreingestellt ist 255.255.255.0.
Byte 2 (0...255)	0..255, <b>255</b>	
Byte 3 (0...255)	0..255, <b>255</b>	
Byte 4 (0...255)	0..255, <b>0</b>	
 IP-Standard Gateway		
IP-Standard Gateway		
Byte 1 (0...255)	0..255, <b>0</b>	Definiert die IP-Adresse des Standardgateways bei aktivierter manueller Adresszuweisung. Die Adresse wird aus 4 einzelnen Bytes zusammengesetzt. Voreingestellt ist 0.0.0.0.
Byte 2 (0...255)	0..255, <b>0</b>	
Byte 3 (0...255)	0..255, <b>0</b>	
Byte 4 (0...255)	0..255, <b>0</b>	

## 5 Anhang

### 5.1 Betrieb in der ETS3

Über ein IP-Datennetzwerk und die KNX/IP-Schnittstelle kann eine direkte Verbindung von einem PC oder anderen Datenverarbeitungsgeräten (z. B. Visualisierungen) im Netzwerk zum KNX/EIB hergestellt werden. Damit ist der Zugriff auf den Bus von jedem Punkt im IP-Datennetzwerk möglich.

Die ETS3 sowie die ETS4 ermöglicht die Konfiguration von KNX/EIB-Installationen über das vorhandene IP-Datennetzwerk und verwendet die KNX/IP-Schnittstelle wie eine herkömmliche serielle RS232- oder USB-Datenschnittstelle zur Kommunikation mit dem Bus. Dies schließt auch den Download von Busgeräten oder die Funktion des Gruppenmonitors oder Busmonitors mit ein. Für eine stabile Kommunikation über KNXnet/IP Tunneling muss über die ETS3 oder ETS4 eine zweite physikalische Adresse (ähnlich der lokalen physikalischen Adresse bei einer RS232- oder USB-Verbindung) eingestellt werden.

Zur Konfiguration der Kommunikationsschnittstelle sind die folgenden Schritte auszuführen:

1. Zunächst ist die ETS3 zu starten und der Optionsdialog der Kommunikationseigenschaften aufzurufen  
(Extras → Optionen → Kommunikation – vgl. Abbildung 7).

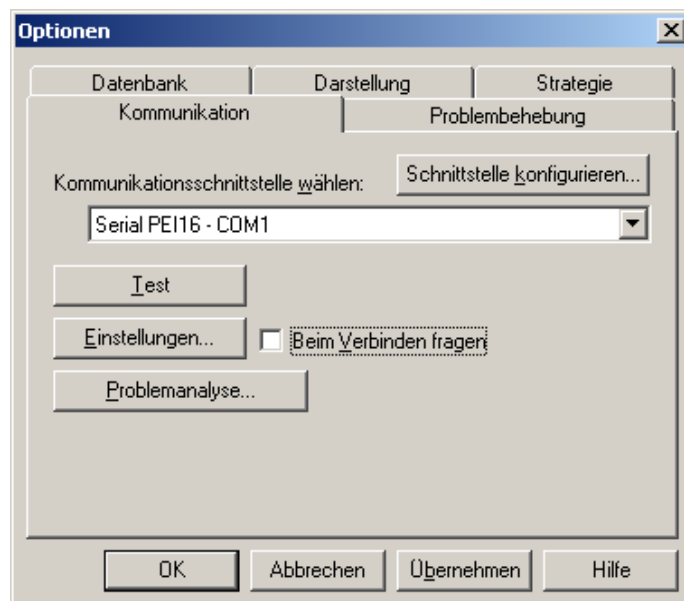


Abbildung 4: Optionsdialog der Kommunikationseigenschaften der ETS3

- Schaltfläche "Schnittstelle konfigurieren" anwählen. Das Fenster "ETS Connection Manager" öffnet sich (vgl. Abbildung 8).

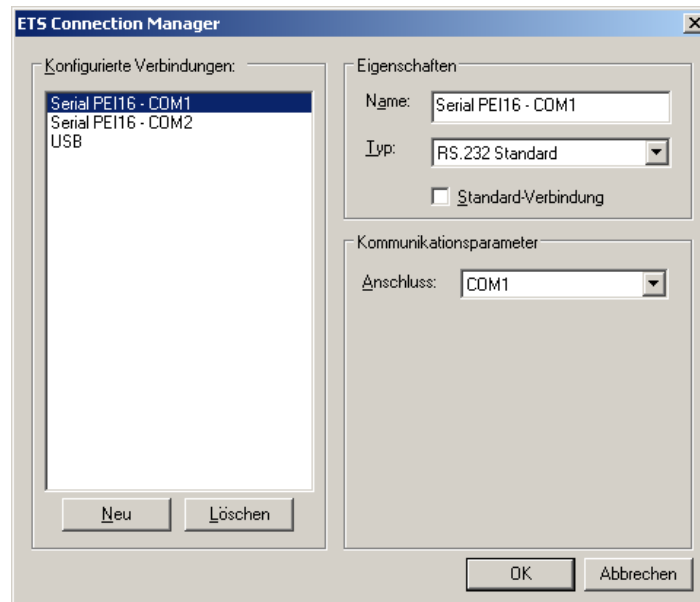


Abbildung 5: ETS Connection Manager

- Eine neue Verbindung anlegen. Dazu die Schaltfläche "Neu" betätigen. Der neuen Verbindung einen eindeutigen Namen vergeben. Als Typ „KNXnet/IP“ auswählen (vgl. Abbildung 9). Im Anschluss sucht die ETS automatisch im IP-Datennetz nach verfügbaren IP-Kommunikationsgeräten.

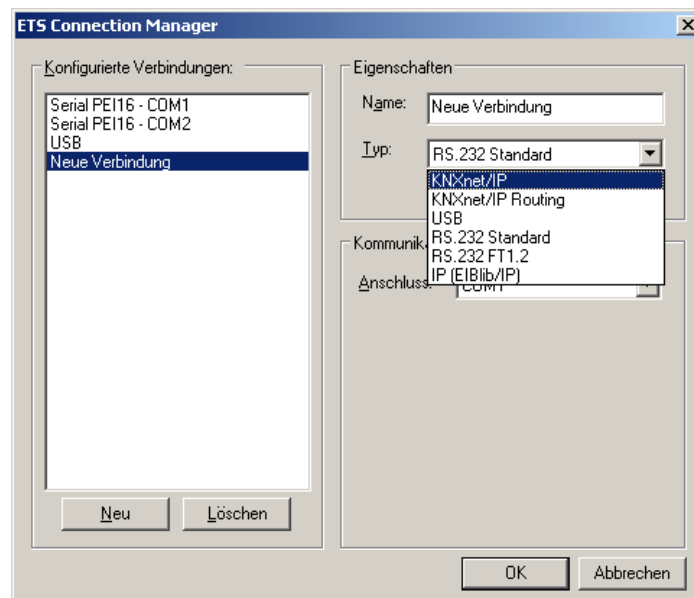


Abbildung 6: Neue Verbindung als KNXnet/IP anlegen

4. In der Geräteliste "KNXnet/IP Gerät" sind alle im IP-Netzwerk gefundenen KNX/IP-Schnittstellen gelistet (vgl. Abbildung 10). Es wird der in der ETS vergebene Name (default "Gira KNX/IP-Schnittstelle") und die IP-Adresse der KNX/IP-Schnittstelle angezeigt. Das eventuell vorhandene (P) hinter diesen Angaben signalisiert einen aktivierten Programmiermodus. Auf diese Weise lassen sich auch in Systemen mit mehreren Schnittstellen gezielt einzelne Geräte identifizieren. In der Geräteliste muss die KNX/IP-Schnittstelle ausgewählt werden, welche in der konfigurierten Verbindung als "Datenschnittstelle" arbeiten soll. Durch Anklicken der Schaltfläche "Erneut Scannen" leitet die ETS einen weiteren Scanvorgang ein und sucht erneut im IP-Netzwerk nach IP Schnittstellen.

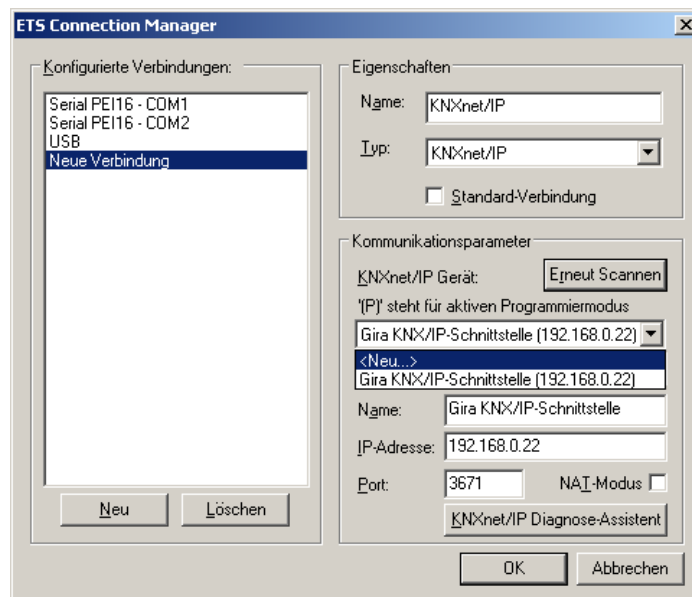


Abbildung 7: Geräteliste unter Kommunikationsparametern mit allen gefundenen IP Schnittstellen

5. Im Anschluss kann die Konfiguration der neuen Verbindung durch Anklicken der Schaltfläche "OK" abgeschlossen werden. Die Kommunikationsparameter (vgl. Abbildung 11) sollten unverändert bleiben.


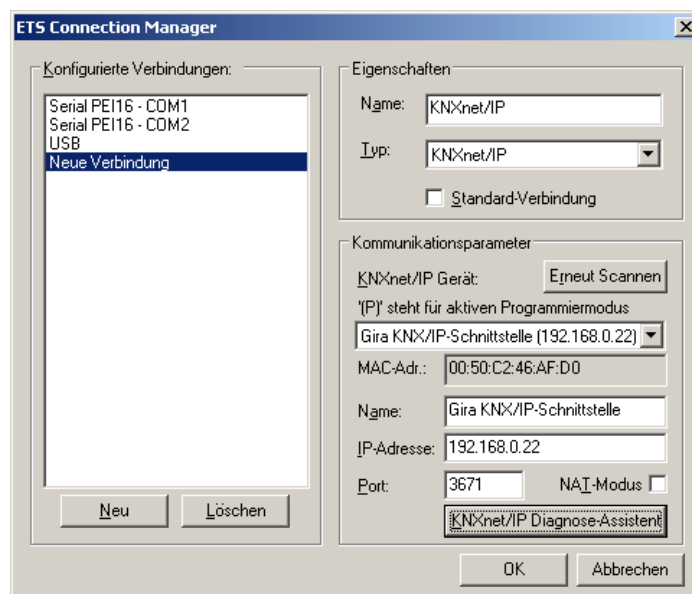


Abbildung 8: Vollständige Schnittstellenkonfiguration der KNX/IP-Schnittstelle

6. Für eine stabile Kommunikation über KNXnet/IP Tunneling muss über die ETS eine zweite physikalische Adresse (ähnlich der lokalen physikalischen Adresse bei einer RS232- oder USB-Verbindung) eingestellt werden. Dazu im Optionsdialog der Kommunikationseigenschaften als Schnittstelle die neue KNXnet/IP-Verbindung auswählen (vgl. Abbildung 12) und die Schaltfläche "Einstellungen" anklicken.

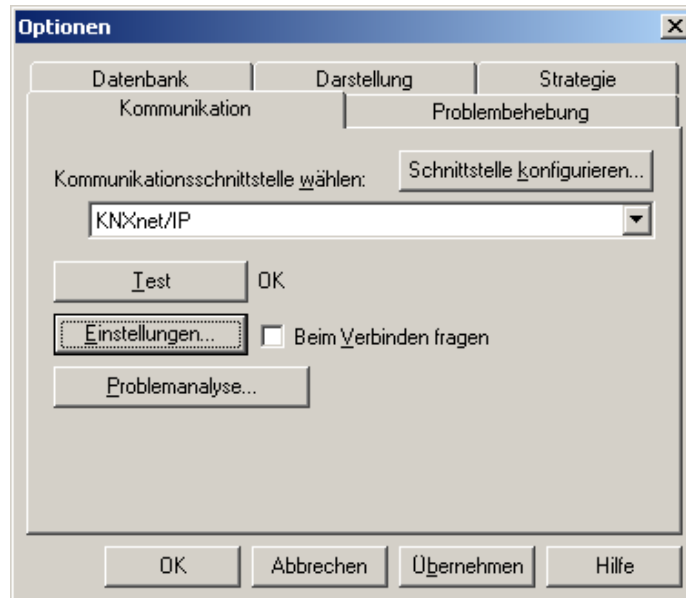


**Abbildung 9: Kommunikationsschnittstelle KNXnet/IP auswählen und Einstellungen öffnen**

7. Die Einstellungen der lokalen Schnittstelle öffnen sich (vgl. Abbildung 13). In das Feld "Physikalische Adresse" muss nun die physikalische Adresse der IP-Datenschnittstelle eingetragen werden. Es ist darauf zu achten, dass die Adresse von keinem anderen Gerät im ETS-Projekt verwendet wird (ggf. Prüfung durch die ETS "Ist Adresse frei?"). Nach einer erfolgreichen Adressvergabe sollte im ETS-Projekt an der topologisch richtigen Stelle ein Dummy-Gerät eingefügt werden.

Im Auslieferungszustand ist als physikalische Adresse "15.15.255" voreingestellt.

Durch Anklicken der Schaltfläche "OK" wird die Konfiguration der IP-Datenschnittstelle beendet. Die IP-Verbindung ist danach nutzbar.

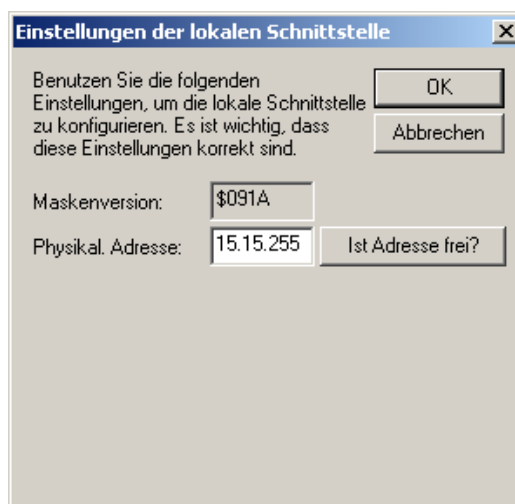

**Abbildung 10: Einstellungen der lokalen Schnittstelle**

NEU

## 5.2 Betrieb in der ETS4

Über ein IP-Datennetzwerk und die KNX/IP-Schnittstelle kann eine direkte Verbindung von einem PC oder anderen Datenverarbeitungsgeräten (z. B. Visualisierungen) im Netzwerk zum KNX/EIB hergestellt werden. Damit ist der Zugriff auf den Bus von jedem Punkt im IP-Datennetzwerk möglich.

Die ETS3 sowie die ETS4 ermöglicht die Konfiguration von KNX/EIB-Installationen über das vorhandene IP-Datennetzwerk und verwendet die KNX/IP-Schnittstelle wie eine herkömmliche serielle RS232- oder USB-Datenschnittstelle zur Kommunikation mit dem Bus. Dies schließt auch den Download von Busgeräten oder die Funktion des Gruppenmonitors mit ein (keine Unterstützung des Busmonitor-Mode).

Für eine stabile Kommunikation über KNXnet/IP Tunneling muss über die ETS3 oder ETS4 eine zweite physikalische Adresse (ähnlich der lokalen physikalischen Adresse bei einer RS232- oder USB-Verbindung) eingestellt werden.

Zur Konfiguration der Kommunikationsschnittstelle sind die folgenden Schritte auszuführen:

1. Zunächst ist die ETS4 zu starten und die Einstellungen für die Kommunikation zu öffnen (Einstellungen->Kommunikation – vgl. Abbildung 14)

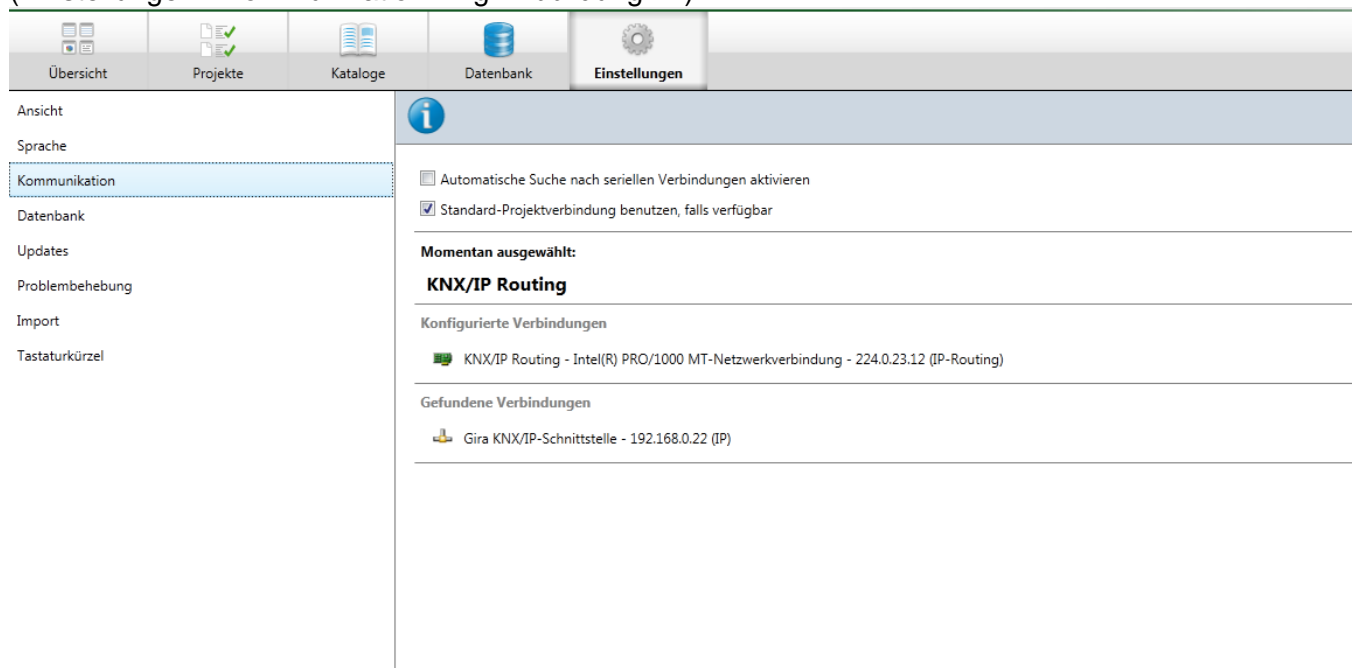


Abbildung 11: Kommunikationseinstellungen in der ETS4



2. Dann in der Geräteliste unter „Gefundene Verbindungen“ die KNX/IP-Schnittstelle selektieren und auf „Auswählen“ klicken.

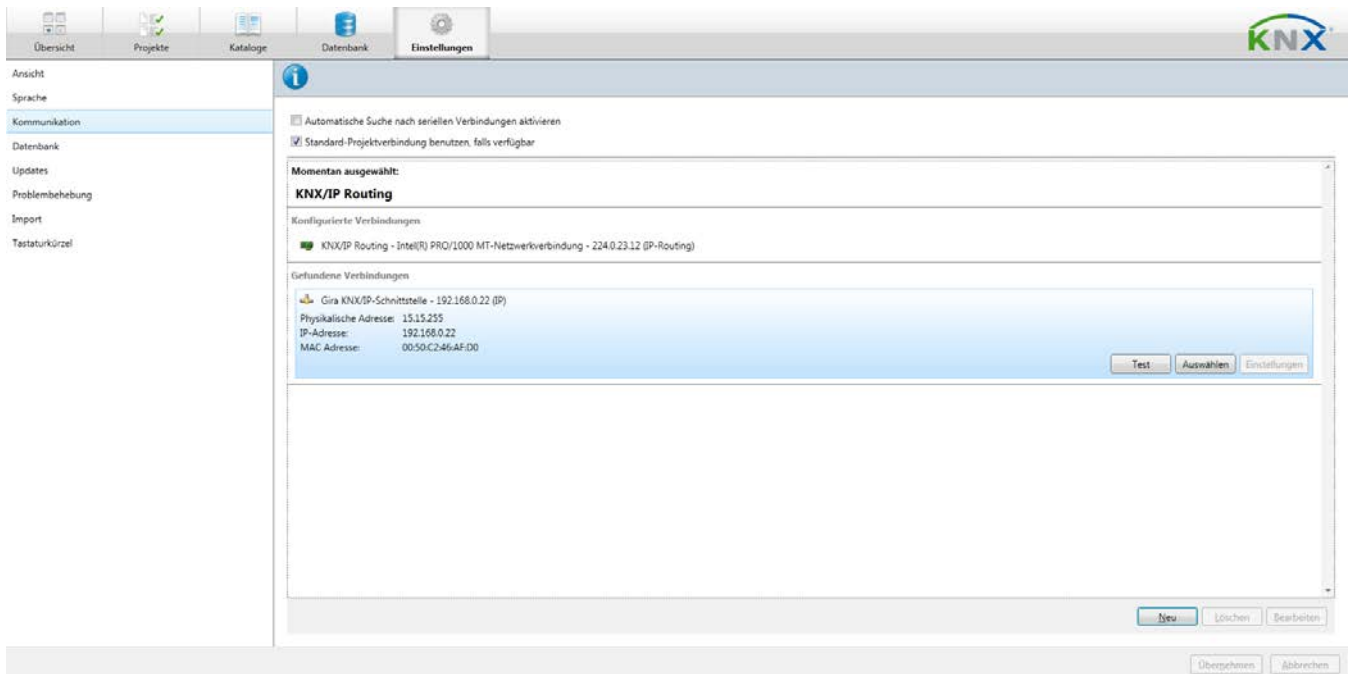


Abbildung 12: Gerät für Tunneling Verbindung in der ETS 4 auswählen

3. Die Schnittstelle taucht jetzt unter „Konfigurierte Verbindungen“ auf.

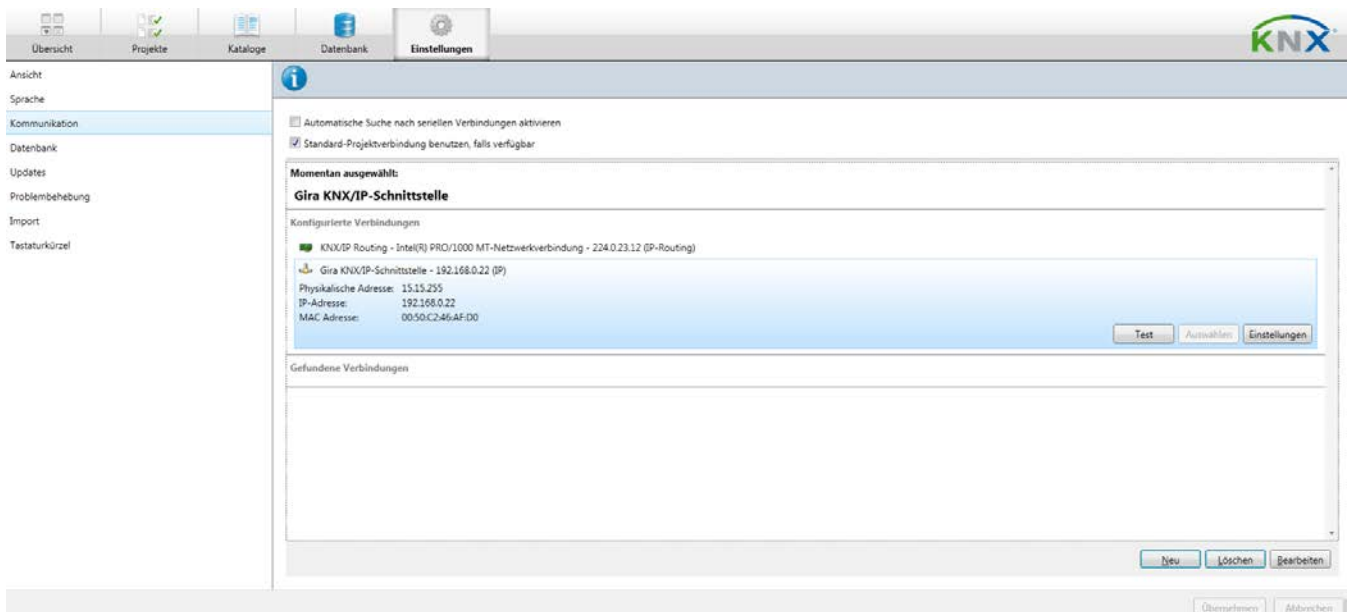


Abbildung 13: Gerät wurde ausgewählt in der ETS4

4. Für eine stabile Kommunikation über KNXnet/IP Tunneling muss über die ETS eine zweite physikalische Adresse (ähnlich der lokalen physikalischen Adresse bei einer RS232- oder USB-Verbindung) eingestellt werden. Dazu das Gerät unter „Konfigurierte Verbindungen“ selektieren und „Einstellungen“ anklicken.

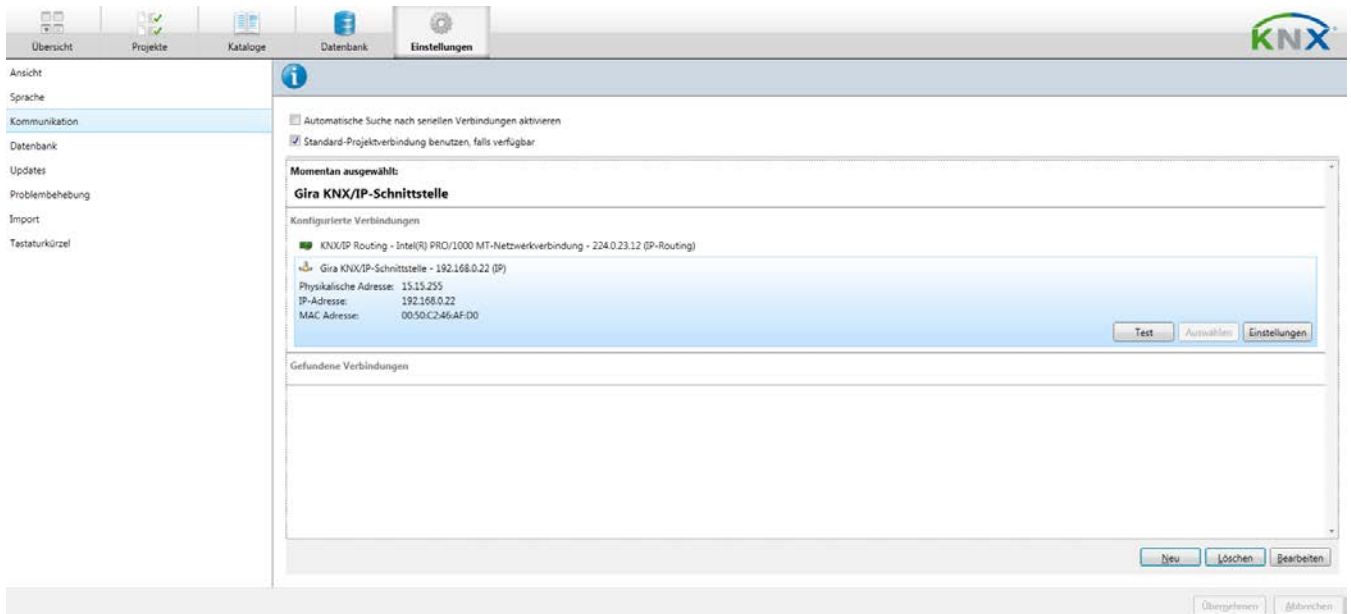


Abbildung 14: Gerät in der ETS4 unter "konfigurierte Verbindungen" auswählen

5. Der Konfigurationsdialog öffnet sich. In das Feld der physikalischen Adresse des Gerätes muss nun die gewünschte Adresse eingetragen werden. Es ist darauf zu achten, dass die Adresse von keinem anderen Gerät im ETS Projekt verwendet wird (ggf. Prüfung durch die ETS „Adresse frei?“).

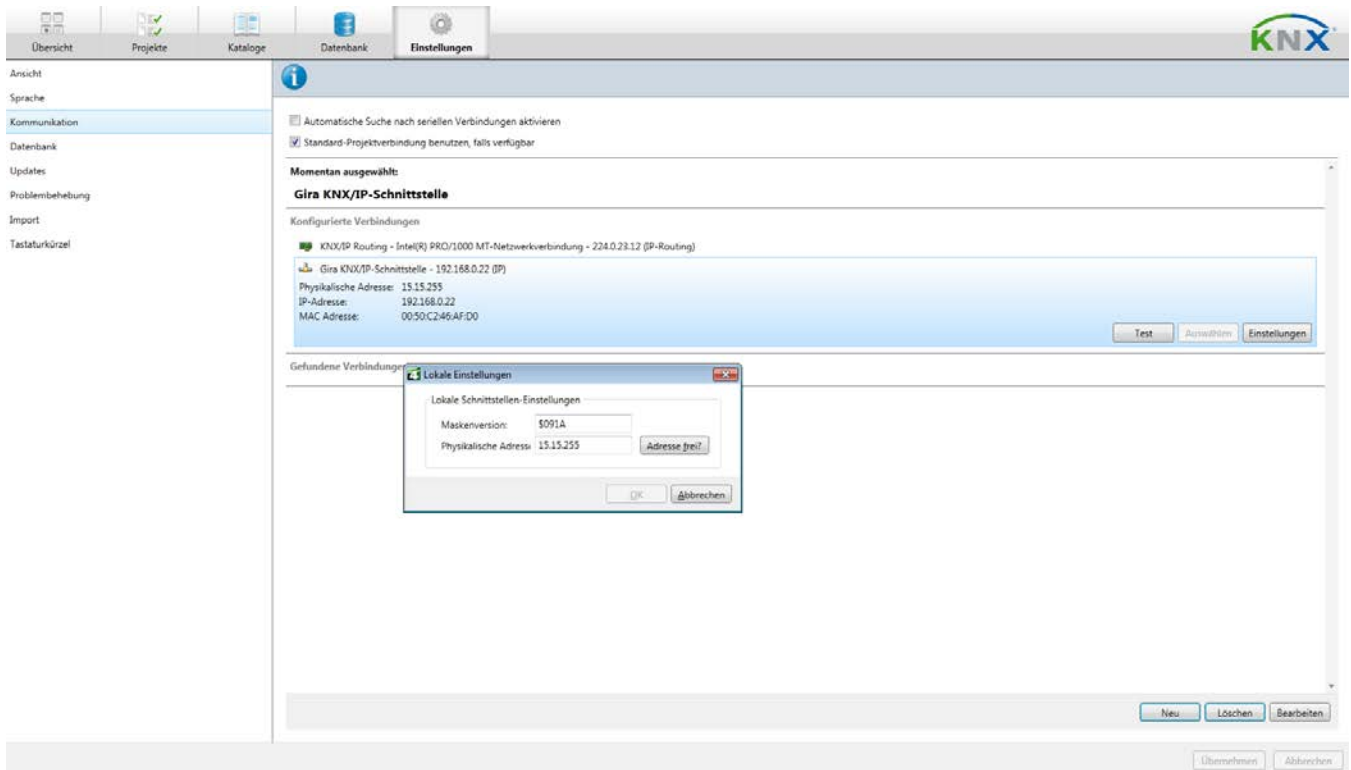


Abbildung 15: Einstellen der lokalen physikalischen Adresse

## 6 Lizenz-Vertrag KNX/IP-Schnittstelle Software

Im Folgenden sind die Vertragsbedingungen für die Benutzung der Software durch Sie als dem "Lizenznehmer" aufgeführt.

Durch Annahme dieser Vereinbarung und durch die Installation der KNX/IP-Schnittstellen Software oder der Ingebrauchnahme der KNX/IP-Schnittstelle schließen Sie einen Vertrag mit der Firma Gira, Giersiepen GmbH & Co KG und erklären sich an die Bestimmungen dieses Vertrages gebunden.

### 6.1 Definitionen

**Lizenzgeber:** Gira, Giersiepen GmbH & Co KG, Radevormwald, Deutschland

**Lizenznehmer:** Der rechtmäßige Empfänger der KNX/IP-Schnittstellen Software

**Firmware:** Software, die auf der KNX/IP-Schnittstellen Hardware eingebettet ist und zum Betrieb der KNX/IP-Schnittstelle dient.

**KNX/IP-Schnittstellen Software:** Als KNX/IP-Schnittstellen Software wird die gesamte Software inklusive der Betriebsdaten bezeichnet, die für das Produkt KNX/IP-Schnittstelle zur Verfügung gestellt wird. Dies sind insbesondere die Firmware und die Produktdatenbank.

### 6.2 Vertragsgegenstand

Gegenstand dieses Vertrages ist die auf Datenträger oder durch Download bereitgestellte KNX/IP-Schnittstellen Software, sowie die zugehörige Dokumentation in schriftlicher oder elektronischer Form.

### 6.3 Rechte zur Nutzung der KNX/IP-Schnittstellen Software

Der Lizenzgeber räumt dem Lizenznehmer das nichtausschließliche, zeitlich unbegrenzte und nicht übertragbare Recht ein, die KNX/IP-Schnittstellen Software gemäß den nachstehenden Bedingungen für die in der gültigen Fassung der Dokumentation (die in gedruckter Form oder aber auch als Onlinehilfe bzw. Onlinedokumentation zur Verfügung gestellt wird) genannten Zwecke und Anwendungsbereiche zu nutzen.

Der Lizenznehmer verpflichtet sich sicherzustellen, dass jeder, der das Programm nutzt, dies nur im Rahmen dieser Lizenzvereinbarung durchführt und diese Lizenzvereinbarung einhält.

## 6.4 Beschränkung der Nutzungsrechte

- 6.4.1 Der Lizenznehmer ist nicht berechtigt die KNX/IP-Schnittstellen Software ganz oder auszugsweise in anderer Weise als hierin beschrieben zu nutzen, zu kopieren, zu bearbeiten oder zu übertragen. Davon ausgenommen ist eine (1) Kopie, die vom Lizenznehmer ausschließlich für Archivierungs- und Sicherungszwecke angefertigt wird.
- 6.4.2 Der Lizenznehmer ist nicht berechtigt Reverse-Engineering Techniken auf die KNX/IP-Schnittstellen Software anzuwenden oder die KNX/IP-Schnittstellen Software in eine andere Form umzuwandeln. Zu solchen Techniken gehören insbesondere das disassemblieren (Umwandlung binär kodierter Maschinenbefehle eines ausführbaren Programmes in eine für Menschen lesbarere Assemblersprache) oder dekompileieren (Umwandlung binär kodierter Maschinenbefehle oder Assemblerbefehle in Quellcode in Form von Hochsprachenbefehlen).
- 6.4.3 Die Firmware darf nur auf der vom Lizenzgeber freigegebenen Hardware (KNX/IP-Schnittstelle) installiert und genutzt werden.
- 6.4.4 Die KNX/IP-Schnittstellen Software darf nicht an Dritte weitergegeben werden oder Dritten zugänglich gemacht werden.
- 6.4.5 Der Lizenznehmer ist nicht berechtigt, die KNX/IP-Schnittstellen Software zu vermieten, zu verleasen oder Unterlizenzen an dem Programm zu erteilen.
- 6.4.6 Der Lizenznehmer benötigt eine schriftliche Genehmigung des Lizenzgebers, um Software zu erstellen und zu vertreiben, die von der KNX/IP-Schnittstellen Software abgeleitet ist.
- 6.4.7 Die Mechanismen des Lizenzmanagements und des Kopierschutzes der KNX/IP-Schnittstellen Software dürfen nicht analysiert, nicht publiziert, nicht umgangen und nicht außer Funktion gesetzt werden.

## 6.5 Eigentum, Geheimhaltung

**6.5.1 Die KNX/IP-Schnittstellen Software und die Dokumentation (die in gedruckter Form oder aber auch als Onlinehilfe bzw. Onlinedokumentation zur Verfügung gestellt wird) sind Geschäftsgeheimnisse des Lizenzgebers und/oder Gegenstand von Copyright und/oder anderen Rechten und gehören auch weiterhin dem Lizenzgeber. Der Lizenznehmer wird diese Rechte beachten.**

**6.5.2 Weder die Software, noch die Datensicherungskopie, noch die Dokumentation (die in gedruckter Form oder aber auch als Onlinehilfe bzw. Onlinedokumentation zur Verfügung gestellt wird) dürfen zu irgendeinem Zeitpunkt - ganz oder in Teilen, entgeltlich oder unentgeltlich - an Dritte weitergegeben werden.**

## 6.6 Änderungen, Nachlieferungen

Die KNX/IP-Schnittstellen Software und die Dokumentation (die in gedruckter Form oder aber auch als Onlinehilfe bzw. Onlinedokumentation zur Verfügung gestellt wird) unterliegen eventuell Änderungen durch den Lizenzgeber.

## 6.7 Gewährleistung

Die KNX/IP-Schnittstellen Software wird zusammen mit der Software von Dritten ausgeliefert, die im Abschnitt 11 aufgelistet ist. Für die Software Dritter wird keinerlei Gewährleistung übernommen.

**6.7.1 Die KNX/IP-Schnittstellen Software und die Dokumentation (die in gedruckter Form oder aber auch als Onlinehilfe bzw. Onlinedokumentation zur Verfügung gestellt wird) werden dem Lizenznehmer in der jeweils gültigen Fassung zur Verfügung gestellt. Die Gewährleistungszeit für die KNX/IP-Schnittstellen Software beträgt 24 Monate. Während dieser Zeit leistet der Lizenzgeber wie folgt Gewähr:**

- Die Software ist bei Übergabe frei von Material- und Herstellungsfehlern.
  - Die Software arbeitet gemäß der ihr beigefügten Dokumentation in der jeweils gültigen Fassung.
  - Die Software ist auf den vom Lizenzgeber genannten Computer-Stationen ablauffähig.
- Die Erfüllung der Gewährleistung erfolgt durch Ersatzlieferung.

**6.7.2 Im Übrigen wird für die Fehlerfreiheit der KNX/IP-Schnittstellen Software und ihrer Datenstrukturen keine Gewährleistung übernommen. Die Gewährleistung erstreckt sich auch nicht auf Mängel, die auf unsachgemäße Behandlung oder andere Ursachen außerhalb des Einflussbereiches des Lizenzgebers zurückzuführen sind. Weitere Gewährleistungsansprüche sind ausgeschlossen.**

## 6.8 Haftung

Der Lizenzgeber ist nicht haftbar für Schäden aus entgangenem Gewinn, aus Verlust von Daten oder aus anderem finanziellen Verlust, die im Rahmen der Benutzung der KNX/IP-Schnittstellen Software entstehen, selbst wenn der Lizenzgeber von der Möglichkeit eines solchen Schadens Kenntnis hat. Diese Haftungsbeschränkung gilt für alle Schadensersatzansprüche des Lizenznehmers, gleich aus welchem Rechtsgrund. Auf jeden Fall ist die Haftung auf den Kaufpreis des Produkts beschränkt. Der Haftungsausschluss gilt nicht für Schäden, die durch Vorsatz oder grobe Fahrlässigkeit vom Lizenzgeber verursacht wurden. Unberührt bleiben weiterhin Ansprüche, die sich auf den gesetzlichen Vorschriften zur Produkthaftung beruhen.

## 6.9 Anwendbares Recht

Dieser Vertrag unterliegt dem Recht der Bundesrepublik Deutschland.  
Gerichtsstand ist Köln.

## 6.10 Beendigung

Dieser Vertrag und die darin gewährten Rechte enden, wenn der Lizenznehmer eine oder mehrere Bestimmungen dieses Vertrages nicht erfüllt oder diesen Vertrag schriftlich kündigt. Die übergebene KNX/IP-Schnittstellen Software und die Dokumentation (die in gedruckter Form oder aber auch als Onlinehilfe bzw. Onlinedokumentation zur Verfügung gestellt wird) einschließlich aller Kopien sind in diesem Falle unverzüglich und unaufgefordert vollständig zurückzugeben. Ein Anspruch auf Rückerstattung des bezahlten Preises ist in diesem Falle ausgeschlossen.

Mit Beendigung des Vertrages erlischt die Lizenz zur Nutzung der KNX/IP-Schnittstellen Software. Das Produkt KNX/IP-Schnittstelle muss in diesem Fall außer Betrieb genommen werden. Eine weitere Nutzung der KNX/IP-Schnittstelle ohne Lizenz ist ausgeschlossen.

Die Inbetriebnahme-Software und die Visualisierungs-Software muss De-Installiert und alle Kopien vernichtet oder an den Lizenzgeber zurückgegeben werden.

## 6.11 Nebenabreden und Vertragsänderungen

Nebenabreden und Vertragsänderungen bedürfen zu ihrer Gültigkeit der Schriftform.

## 6.12 Ausnahme

Alle Rechte die nicht ausdrücklich in diesem Vertrag erwähnt werden, sind vorbehalten.

## 7 Open Source Software

Dieses Produkt verwendet Software aus dritten Quellen, die im Rahmen der GNU General Public License (GPL), bzw. Lesser GNU General Public License LGPL verwendet werden.

Die in diesem Produkt verwendeten Software-Pakete, die unter GPL/LGPL lizenziert sind, werden im Folgenden beschrieben.

Software-Paket	U-Boot
Version der Software	2010.06
Bezugsquelle	<a href="http://www.denx.de/wiki/U-Boot/WebHome">http://www.denx.de/wiki/U-Boot/WebHome</a>
Lizenz	GNU GPL, Version 2, June 1991
Copyright-Vermerk	Copyright © 2000-2010 by Wolfgang Denk et al.

Software-Paket	GNU/Linux
Version der Software	2.6.30
Bezugsquelle	<a href="http://kernel.org">http://kernel.org</a>
Lizenz	GNU GPL, Version 2, June 1991
Copyright-Vermerk	Copyright © 1992-2010 by Linus Torvalds et al.

Software-Paket	Buildroot
Version der Software	2010.11
Bezugsquelle	<a href="http://buildroot.org">http://buildroot.org</a>
Lizenz	GNU GPL, Version 2, June 1991
Copyright-Vermerk	Copyright © 1999-2005 Erik Andersen, 2006-2011 The Buildroot developers

Software-Paket	GNU C Library (GLIBC)
Version der Software	2.11.1
Bezugsquelle	<a href="http://www.gnu.org/s/libc/">http://www.gnu.org/s/libc/</a>
Lizenz	GNU LGPL, Version 2.1, February 1999
Copyright-Vermerk	Copyright © 1996-2010 by Roland McGrath et al.

Die Lizenztexte der GPL und LGPL sind über die folgende Web-Seite verfügbar:  
<http://www.gnu.org/licenses/licenses.html>

Lizenz-Text: Für diese Software übernimmt Gira keinerlei Haftung oder Garantie.

Der Quellcode für diese Software kann über die E-Mail-Adresse [info@gira.de](mailto:info@gira.de) bezogen werden.

Dieses Angebot ist für 3 Jahre nach Auslauf des Service für dieses Produkt gültig.



## 7.1 GNU GPL, Version 2, June 1991

### GNU GENERAL PUBLIC LICENSE Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

---

GNU GENERAL PUBLIC LICENSE  
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a. You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b. You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c. If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - d. Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - e. Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - f. Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

---

## NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
  
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>  
Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome to redistribute it
under certain conditions; type `show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

```
<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice
```

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

## 7.2 GNU LGPL, Version 2.1, February 1999

### GNU LESSER GENERAL PUBLIC LICENSE Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

### GNU LESSER GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
  - a) The modified work must itself be a software library.
  - b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
  - c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.



d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the brary, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License.

Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:
  - a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
  - b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.
10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.
11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

### NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.>  
Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library `Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990  
Ty Coon, President of Vice

That's all there is to it!